

QUICK START GUIDE

***Thank you for purchasing the **ButtKicker®
Individual Seat Control System™*****

This guide will help you quickly set up and use your new system

Contents:



[1]ButtKicker® mini Concert
or 2 ButtKicker mini LFE



[1] BKA-130-C Power
Amplifier and Remote Control



Included Cables:
[1] RCA "Y" splitter cable
[1] 1 meter RCA male to male cable



[1] or [2] ButtKicker Couch/Chair Mounting
Accessory Kits (BK-CMAK)



START HERE

BEFORE YOU BEGIN:

Please read all safety instructions located in the "ButtKicker Power Amplifier BKA-130-C Owner's Manual" prior to installation.

ButtKicker® mini Concert /LFE Installation

Using the included Couch/Chair Mounting Accessory Kit (CMAK)

- 1) Simply follow the instructions in the included Couch/Chair Mounting Accessory Kit(s).

Directly Mounting to a Chair or Recliner

- 1) The ButtKicker mini Concert/LFE transducer is designed to be installed directly to the frame of your chair(s). While each installation will vary based on your chairs' construction, the basic steps apply to all chairs.
 - a) The mini Concert/LFE transducer should be attached firmly to the frame of your chair. Most chairs are built on a wooden frame to which a recline mechanism is attached. Locate a surface on the wooden frame that accomodate the mini Concert/LFE and allows for proper recline operation.
 - b) Attach the mini Concert/LFE to the chair using wood screws or bolts. The mini Concert can be secured using either the three mounting feet or the side mount flanges. When using the side mount flanges a washer may be need to catch the screw head against the mounting flange surface.

1. INSTALL THE BKA-130-C POWER AMPLIFIER

- 2) The BKA-130-C ampfier is designed to be placed underneath or behind your furniture. The BKA-130-C is not mountable. Many customers find it simplest to place the BKA-130-C underneath their furniture, ensuring that proper clearance is given for the furnitures' recline mechanism (if present).

2. CONNECT THE BUTTKICKER MINI CONCERT/LFE TRANSDUCER TO THE BKA-130-C POWER AMPLIFIER

- 1) Connect the speaker wire from the ButtKicker mini Concert/LFE transducer to the BKA-130-C power amplifier. Connect the positive (**RED**) wire to the **RED** terminal on the BKA-130-C . Connect the negative (**BLACK**) wire to the **BLACK** terminal on the BKA-130-C.

3. CONNECT THE WIRED REMOTE CONTROL TO THE BKA-130-C POWER AMPLIFIER

- 1) Route the wired remote control. Ensure that the cord is positioned in a way that will not interfere with, or be damaged by, your recline mechanism (powered or manual).
- 2) Plug the remote into the port labeled **REMOTE** on your BKA-130-C power amplifier.
- 3) Repeat steps **1** and **2** for each chair.

INSTRUCTIONS FOR WIRED SETUP (FIGURE 4)

1. CONNECT TO YOUR A/V PROCESSOR

- 1) Connect the supplied RCA **Y** cable into the **SUBWOOFER** or **PRE** out of your A/V processor. This will allow you to use both a subwoofer and the ButtKicker system with your A/V processor.
- 2) Connect the RCA cable for your subwoofer (if applicable) to one side of the RCA **Y** cable. Using a male to male RCA cable (not included); connect to the other side of the RCA **Y**. Connect this male to male RCA cable to the **INPUT** on your BKA-130-C power amplifier.
 - a) If you have more than 1 BKA-130-C power amplifier you will need to connect them together so that each unit receives signal. Using the supplied 3' male to male RCA cable, connect one end into the **OUTPUT** of the BKA-130-C power amplifier connected to your A/V processor. Connect the other end into the **INPUT** of your next BKA-130-C power amplifier.
 - b) Repeat step **a)** to connect your BKA-130-C power amplifiers.

TURN ON THE INDIVIDUAL SEAT CONTROL SYSTEM™ FOR EACH CHAIR

1. Connect the power cord for each BKA-130-C power amplifier to an electrical outlet.
2. Move the **POWER** switch on the back of each BKA-130-C power amplifier to the **ON** position.
3. Press the **POWER** button on the wired remote control to turn on the ButtKicker Individual Seat Control System™ for that seat.
 - a) The light on the remote control will be **GREEN** when the system is in **ON**.
 - b) Pressing the **POWER** button a second time will turn off the BKA-130-C power amplifier. The light on the remote control will be turn **RED**.

POWER ON YOUR HOME THEATER AND ADJUST THE SYSTEM

1. Turn on the rest of your home theater; play a movie or music track with deep, low frequency material at normal listening volumes. Many users begin with the low-cut of the BKA-130-C power amplifier in the **OFF** position and the high-cut in the **ON** position; with the frequency knob at 80Hz. Adjust these setting to find the effect that you prefer.
2. Adjust the ButtKicker Individual Seat Control System™ using the wired remote control until you reach the desired level for your seat.
3. Invite your friends and family to watch a movie or listen to music and ENJOY!



If you have questions or need technical support,
please contact The Guitammer Company, not
the store where you purchased the product.

The Guitammer Company
1-888-676-2828
9:00 AM – 5:00 PM EST


Email us at:
support@guitammer.com

Visit us on the web at:
www.thebuttkicker.com

FAQ's

- Q.** Where can I find more information about the BKA-130-C power amplifier?
- A.** Please refer to the separate Owner's Manual for your BKA-130-C power amplifier, included with your system and also available at www.thebuttkicker.com.
- Q.** I have the intensity for the ButtKicker transducer turned up all the way, but I want more. What can I do?
- A.** You can increase the output level of your A/V processors' subwoofer channel. This may require you to adjust your subwoofer to balance it with the rest of your system. Also, consider purchasing RI-K28 rubber isolator feet from www.thebuttkicker.com. Isolators will enhance the ButtKicker transducers; resulting in more intensity and precision.
- Q.** I hear knocking/banging noises coming from the ButtKicker transducer at high intensities.
- A.** Your ButtKicker transducer being over-worked. The ButtKicker transducers can be over-worked because they are receiving too strong a signal coupled with a high intensity setting on the BKA-130-OE amplifier. You can lower the intensity of the BKA-130-C (use your wired remote control) or lower the output level of your A/V processor's subwoofer channel. Also, consider purchasing rubber isolators from www.thebuttkicker.com. Isolators will enhance the ButtKicker transducers; resulting in more intensity and precision and may help to eliminate the issue.

FIGURE 3.

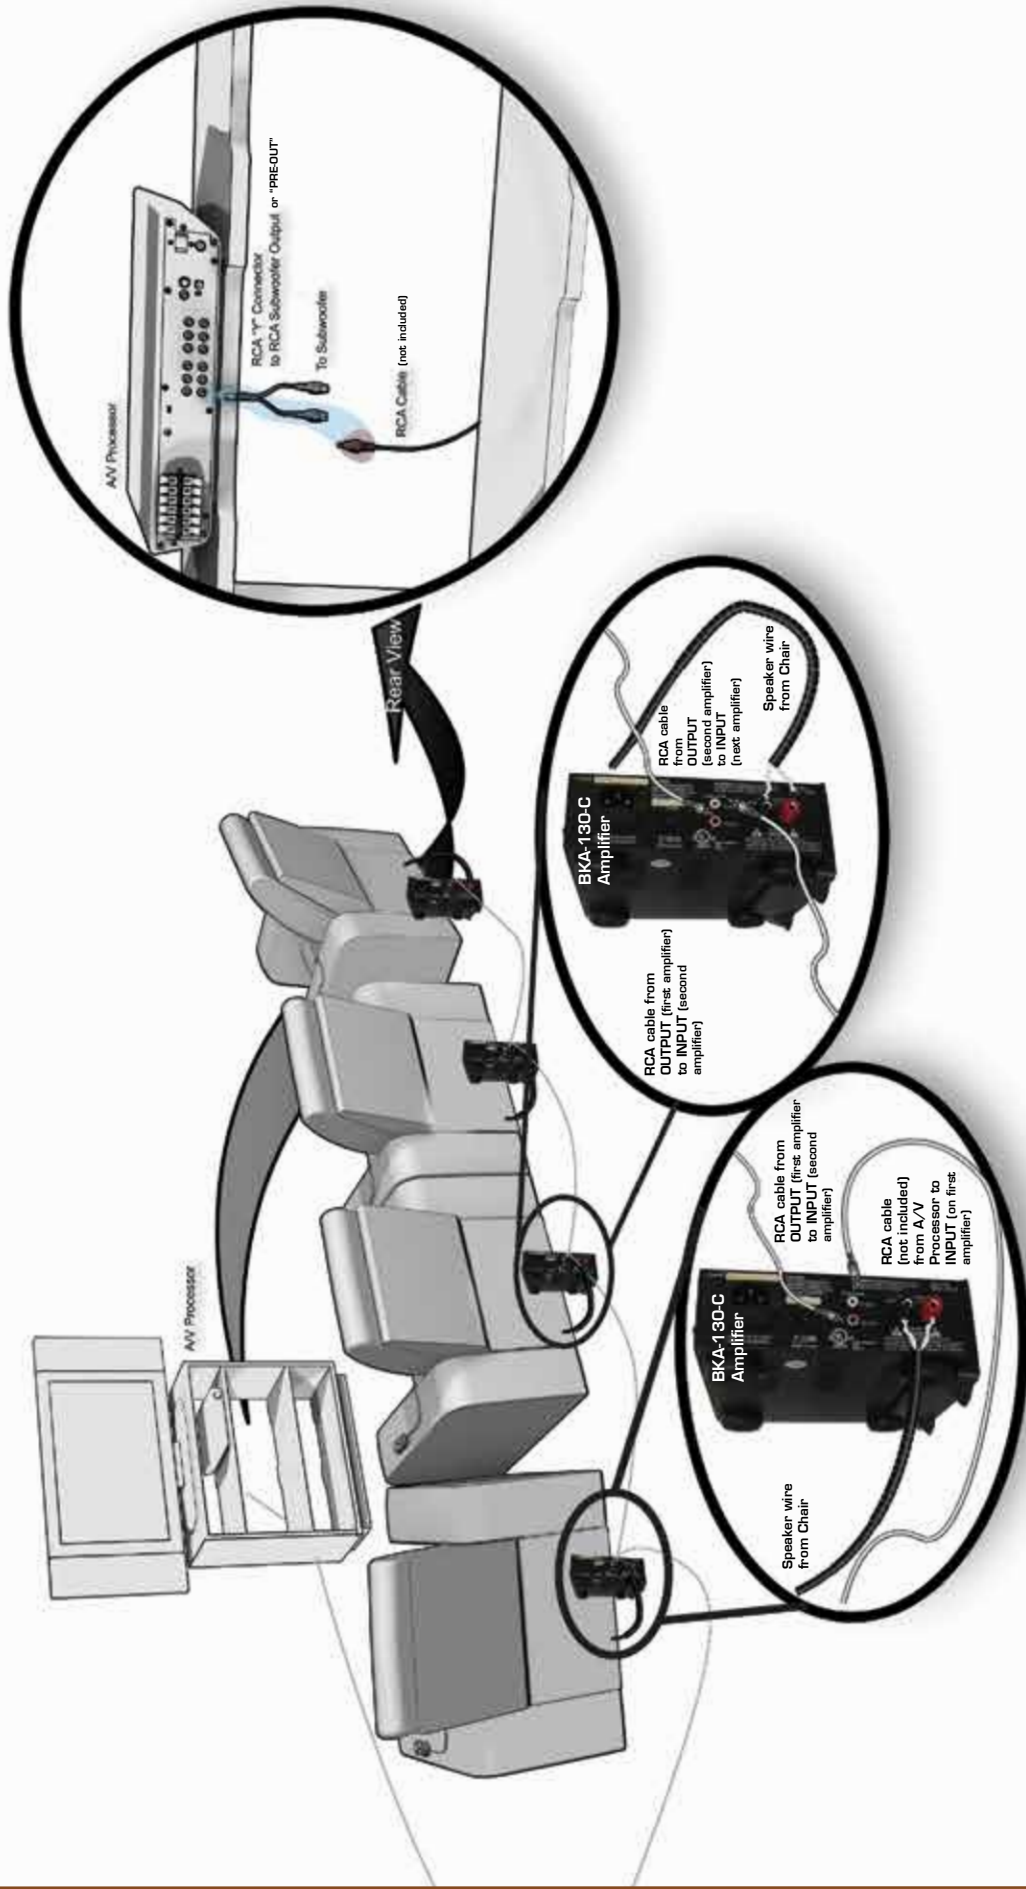

ButtKicker® Individual Seat Control System™

HARD WIRED INSTALLATION Please note: Amps are placed outside of chairs for illustrative purposes only

ButtKicker™
Feel what you've been missing...